


¥Miata Armrest Cushion Installation Instructions¥

for 1990-1997 and 2001 and newer Miatas

1. Clean the top of your locking arm rest to remove any oils (window cleaner works well).
2. Remove the Velcro™ backing to expose the adhesive and press armrest into position.

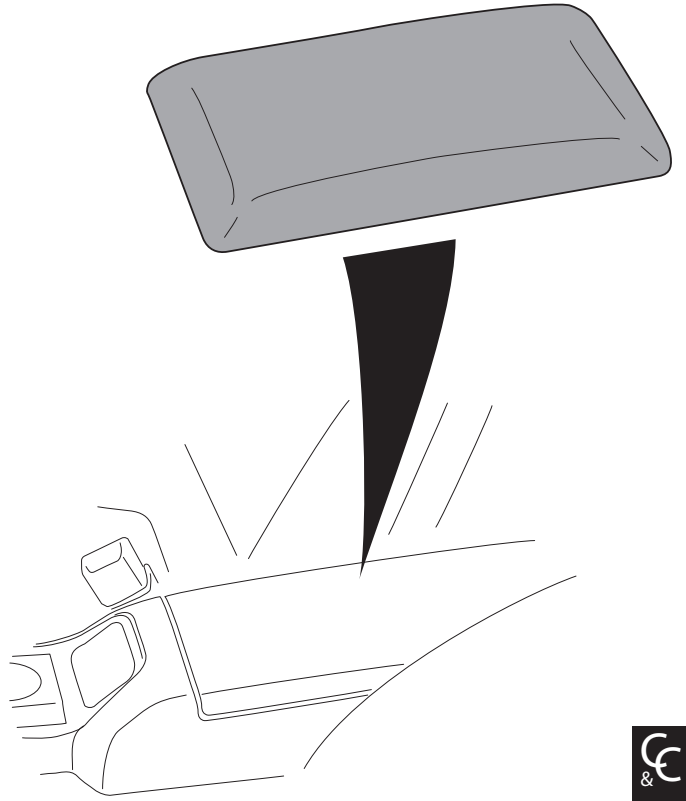

#P1071V or L
or #P1129V or L

