


## Gas Prop Installation Instructions

For '71 - '80 MGB Roadsters

**Note:** these props replace factory-original telescoping props on MGBs (approx. model years 1971 - 1980). They will not replace the manual props found on earlier vehicles. Dual prop kit #P1137E is available for those early MGB's. Also, kit #P1049R is available to convert *this* kit into a dual prop format.

1. Remove the old prop. Use a short broom handle to hold the trunk lid open.
2. Attach the bracket and ball studs exactly as shown in the illustration below. Tighten them after making sure the bracket is flush with the trunk lid.
3. "Loosen up" the pneumatic prop by compressing it once. Place one end on carpet and press the other end very firmly with the heel of your palm; just an inch or two of compression is fine--then release. Snap the gas prop onto the ball studs.
4. Carefully close and open your trunk lid to make sure everything works properly.

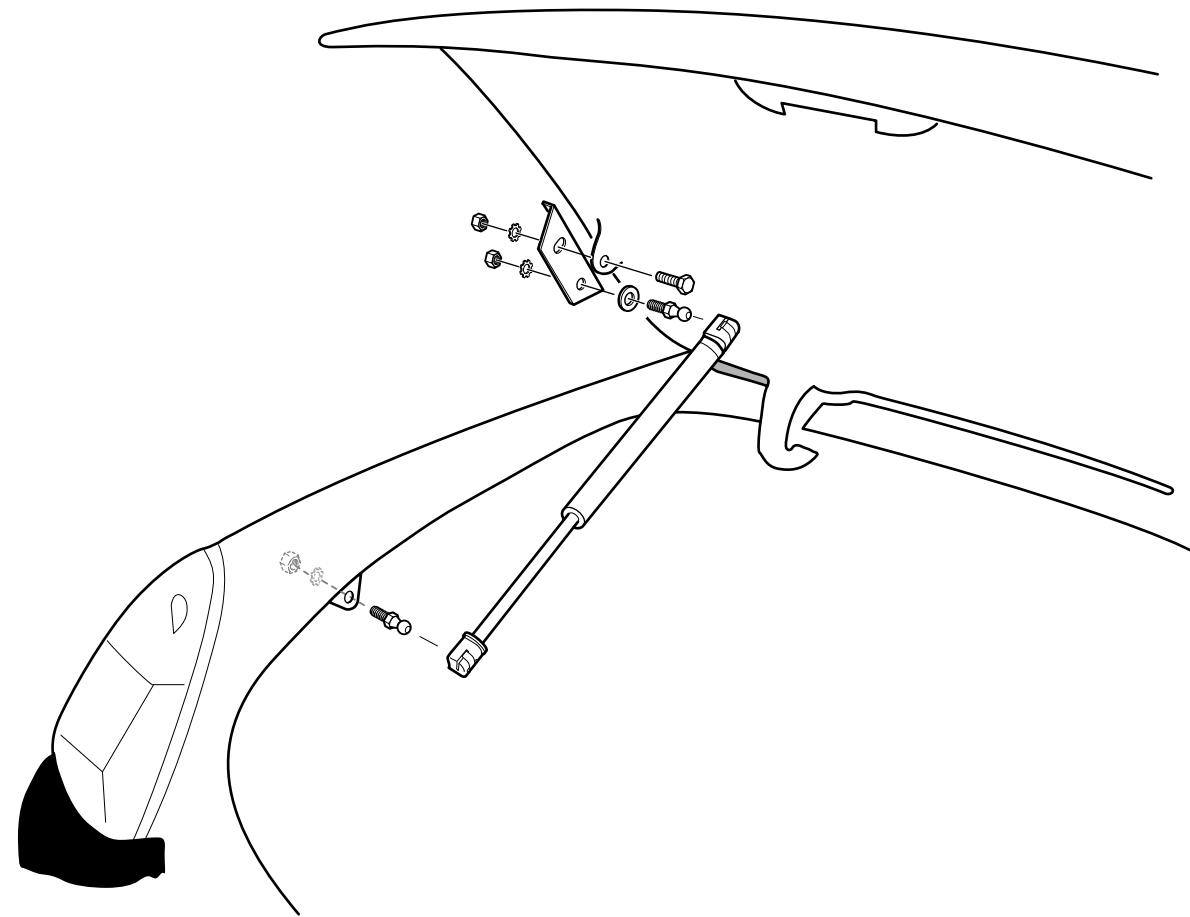

#P1049revC 03.04

